


## Spis treści

1. Log in to your device
2. Check the software version
3. Software update
  - 3.1 To version 1.2.6.1
  - 3.2 To version 1.2.6.3

### 1. Log in to your device

For configuration, connect the CDS-5IPmini to the computer with a network cable.

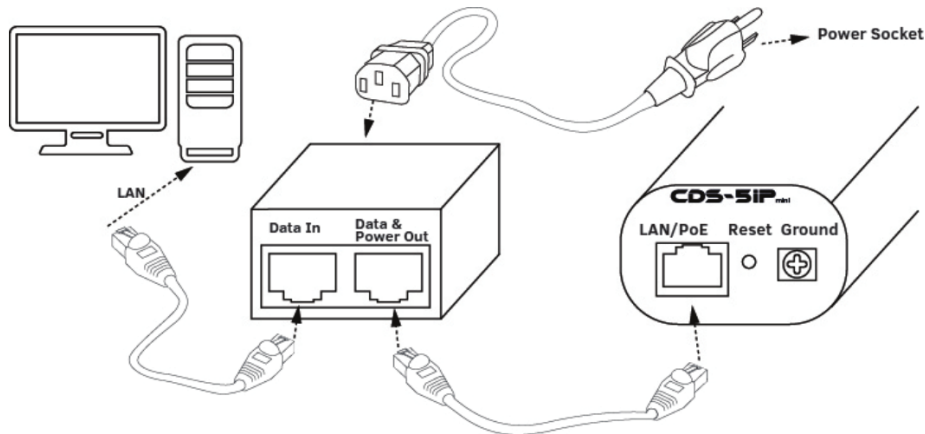

To log on to the CDS-5IPmini wireless module, set the IP address of the computer on the same subnet as the CDS-5IPmini (default 192.168.1.1), then launch your Internet browser (recommended Internet Explorer) and enter the IP address of the module. The login screen will appear:



**Name:**

**Password:**

**Language:**


In the above screen, enter the login information (default: User: **admin**, Password: **password**), then click the "Login" button to log into the module.

### 2. Check the software version

**WARNING!**

If you download software **1.2.6.3** to a version other than **1.2.6.1**, the device will be damaged and will need to be sent to the service.

To check the software version, go to the **Status** -> **Information** tab and check the firmware version. If the software version is different than **1.2.6.1**, you must first install it.



**WIRELESS TRANSMISSION SYSTEM FOR IP HD & 4K CAMERAS**  
**CDS-5iP<sub>MINI</sub>**

Navigation: Status | System | **Wireless** | Management | Tools

Left sidebar: Information >> | Connections | Statistics | ARP Table | Bridge Table

**Information**  
 This page shows the current status and some basic settings of the device.

**System Information**

MAC Address:	70:b3:d5:fe:9e:d6
<b>Firmware Version:</b>	<b>1.2.6.3</b>
System Uptime:	3m:06s
Device Name:	CDS-5iPmini
Country/Region:	European Union

**LAN Settings**

IP Address:	192.168.1.1
Subnet Mask:	255.255.255.0
Gateway IP Address:	0.0.0.0

**Wireless Settings**

Operation Mode:	AP
802.11 Mode:	802.11A/N
SSID:	CAMSAT
Encryption:	Open System
ACK Timeout:	35 µs

### 3. Software update

Link to instructions -> <http://camsat.com.pl/download/firmware/cds5ipmini-firmware-1263.zip>

If the software version is different than **1.2.6.1**, you must first install it.

#### 3.1 To version 1.2.6.1

#### 3.2 To version 1.2.6.3

##### 3.1 Software upgrade to version 1.2.6.1

- Go to the **Management** -> **Firmware Upgrade** tab
- Press the „**Select file**” button and navigate to the directory in which the archive file with software was extracted
- Go to **5iPmini 6\_1** folder and select the **CDS-5iPmini\_2\_6\_1\_21032016.img** file
- Press the „**Upgrade**” button

##### 3.2 Software Upgrade to Version 1.2.6.3

- Go to the **Management** -> **Firmware Upgrade** tab
- Press the „**Select file**” button and navigate to the directory in which the archive file with software was extracted
- Go to **5iPmini 6\_3** folder and select the **CDS-5iPmini\_2\_6\_3\_25042017.img** file
- Press the „**Upgrade**” button

\*After upgrade Firmware Version in Status page is not changed.

If you have any problems with installing or questions, please contact technical support

**Monday to Friday from 8.00 to 16.00**

E-mail: [service@camsat.com](mailto:service@camsat.com)

Tel.: +48 52 387 10 97 (ext. 25 i 26)

**Producer:**

CAMSAT Gralak Przemysław

Ogrodowa 2a

86-050 Solec Kujawski

Offer and information: [www.camsat.com](http://www.camsat.com)

Service: [serwis@camsat.com.pl](mailto:serwis@camsat.com.pl)